

AN10905

USB mass storage class with the LPC1300 on-chip driver

Rev. 01 — 18 January 2010

Application note

Document information

Info	Content
Keywords	LPC1300, USB, MSC, On-Chip Driver, ROM, Cortex-M3, LPC-LINK, LPCXpresso, IAR LPC1343-SK, Keil MCB1000
Abstract	This application note explains how to use the on-chip USB drivers in the LPC1300 Cortex-M3 based microcontroller to implement a simple USB Mass Storage Class (MSC) Device.

Revision history

Rev	Date	Description
01	20100118	Initial revision.

Contact information

For additional information, please visit: <http://www.nxp.com>

For sales office addresses, please send an email to: salesaddresses@nxp.com

1. Introduction

The LPC1300 microcontroller family is based on the ARM Cortex-M3 CPU architecture for embedded applications featuring a high level of support block integration and low power consumption. The peripheral complement of the LPC1300 series includes up to 32 kB of flash memory, up to 8 kB of data memory, USB Device interface, 1 UART, 1 SSP controller, SPI interface, 1 I²C interface, 8 channel 10-bit ADC, 4 general purpose timer/PWMs, and up to 40 general purpose I/O pins.

Also present is 16 kB of ROM. The on-chip ROM contains a bootloader supporting UART and USB flash programming, as APIs for user firmware in flash. The flash API implements a simple interface to the on-board flash programming functionality. The USB API supports development of Human Interface Devices (HID) and MSC devices.

The various topics covered in this application note are as follows:

- USB overview
- On-chip USB driver features
 - On-chip USB driver setup
- Using the usbmemrom example

2. On-chip USB driver features

The on-chip USB driver is incorporated in the LPC1300 family's on-chip ROM. It facilitates building simple USB devices while saving flash memory. The LPC1300 family on-chip USB driver implements both HID and MSC devices. The ROM driver functionality is simplified and easy to use.

The HID class driver is useful for communicating a moderate amount of data (less than 64 kB per second) to a USB host. It supports interrupt transfers which allow the device to be polled by the PC host. The MSC class driver implements a disk drive which can accept file reads and writes from a host USB device.

Table 1. On-chip USB driver features

Feature	ROM HID Driver	ROM MSC Driver
Interrupt Transfers (Data "Pushed" to PC)	Yes	No
Endpoints	Control, 1 in, 1 out	Control, 1 in, 1 out
Real-time Data Transfers	Yes	No
File read/write	No	Yes
Supported clock	12 MHz external crystal ^[1]	12 MHz external crystal ^[1]
RAM Usage	First 384 bytes	First 384 bytes + Storage

[1] A 12 MHz external crystal or a high-accuracy USB ceramic resonator is required to meet the USB 2.0 frequency tolerance specifications which are 12 Mbps 12.000 Mb/s ±0.25 % (2,500 ppm).

See the LPC1300 User's Manual section titled "USB driver functions" for a detailed description of the USB driver functions including clock and pin initialization, USB peripheral initialization, USB connect, and the USB interrupt handler.

This application note describes the MSC driver in detail. Refer to application note AN10904 for a description of the HID driver.

3. On-chip USB driver setup

A few steps are required to use the on-chip USB driver. The following information is not comprehensive and is intended to be used as a supplement to the User's Manual chapter 10 section titled "4.1 USB mass storage driver."

3.1 RAM allocation

The on-chip USB driver requires RAM from 0x10000050 and 0x10000180 to be allocated for USB frame buffers. The method to allocate this RAM depends on the particular development environment, but will usually involve modifying a linker script and changing the address ranges for data placement. Because linkers are often not designed with smart placement algorithms that work with tiny segments of memory, we recommend leaving the RAM from 0x10000000 through 0x10000050 unallocated as well. This is shown in [Fig 1](#) and the following sections describe the steps required for setting up the linker in Keil, IAR and LPCXpresso environments.

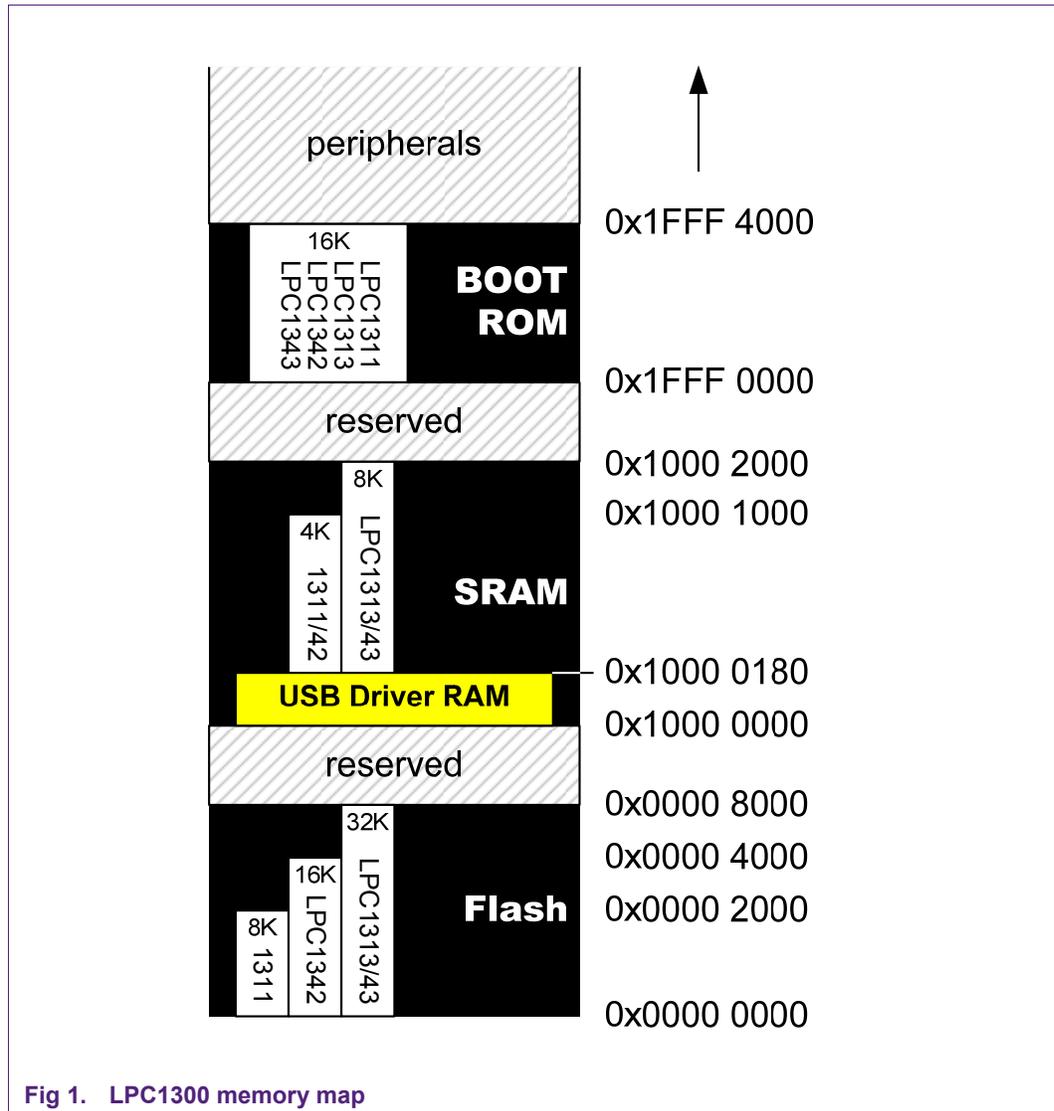


Fig 1. LPC1300 memory map

3.1.1 LPCXpresso by Code Red

LPCXpresso normally generates linker scripts automatically to match the memory map of the currently selected LPC microcontroller. To customize the linker script, LPCXpresso must be configured not to regenerate the linker scripts.

1. First, create and build a project. This will create the standard linker scripts matching the selected LPC1300 part memory configuration. The linker scripts will have an .ld extension. They will be generated into the project\build configuration directory, or usbmemrom\Debug.
2. Save the standard linker scripts by renaming them (we chose the name "lpc1343_romusb_buffer") and moving them into a project subdirectory to distinguish them from the LPCXpresso tools' automatically generated scripts. We chose to put them in a subdirectory called "lpcxpresso_tool" to help distinguish them from Keil and IAR development tool files.
3. Modify the lpc1343_romusb_buffer_mem.ld script to exclude 0x10000000 through 0x10000180 from the memory map. The areas to be changed (RamLoc8

line) for the specific case of the LPC1343 are highlighted below.

```
MEMORY
{
    /* Define each memory region */
    MFlash32 (rx) : ORIGIN = 0x0, LENGTH = 0x8000 /* 32k */
    RamLoc8 (rwx) : ORIGIN = 0x10000180, LENGTH = 0x1E80 /*
8k */
}
```

4. Modify the master linker script include paths. There are typically three linker scripts, `usb_buffer_lib.ld`, `usb_buffer_mem.ld`, and `usb_buffer.ld`. Modify the **`lpc1343_romusb_buffer.ld`** script's `INCLUDE` lines to correct the paths to `lpc1343_romusb_buffer_lib.ld` and `lpc1343_romusb_buffer_mem.ld` as shown below.

```
* (created from nxp_lpc13_c.ld (v3.0.6 (200911181345)) on
Fri Nov 20 17:14:35 PST 2009)
*/
```

```
INCLUDE "../lpcxpreso_tool/lpc1343_romusb_buffer_lib.ld"
INCLUDE "../lpcxpreso_tool/lpc1343_romusb_buffer_mem.ld"
```

```
ENTRY(ResetISR)
```

```
SECTIONS
{
    ...
```

5. Configure LPCXpresso to use the modified linker scripts. This is set up in the Project Properties dialog under C/C++ Build Settings. Now make sure the Tool Settings tab is selected. Then select MCU Linker Target. Uncheck "Manage linker script" and put the linker script path into the Linker script text field. The path should be relative to the project Debug or Release output directories and it should point to the master linker script, which is the one without `_lib` or `_mem` in its name. In this case, `lpc1343_romusb_buffer_mem.ld`.

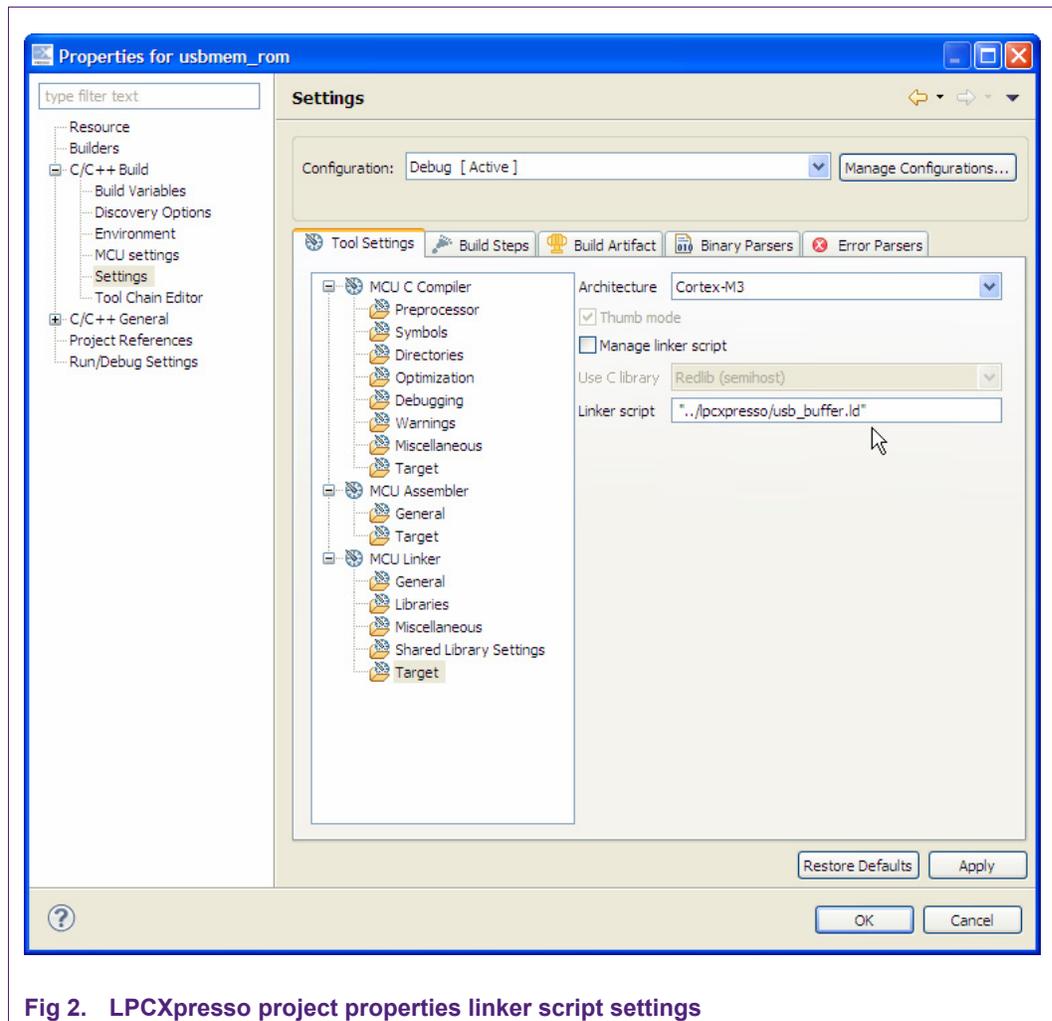


Fig 2. LPCXpresso project properties linker script settings

3.1.2 IAR Embedded Workbench IDE 5.4

IAR projects typically already reference a part-specific linker script. The path to this linker script can be found in the Project Options dialog, under the Linker category, “Config” tab. To allocate the RAM region for the on-chip USB driver, click “Edit” in the Project Options dialog. Use the “Memory Regions” tab in the “Linker configuration file editor” to modify the RAM region start address to 0x10000180.

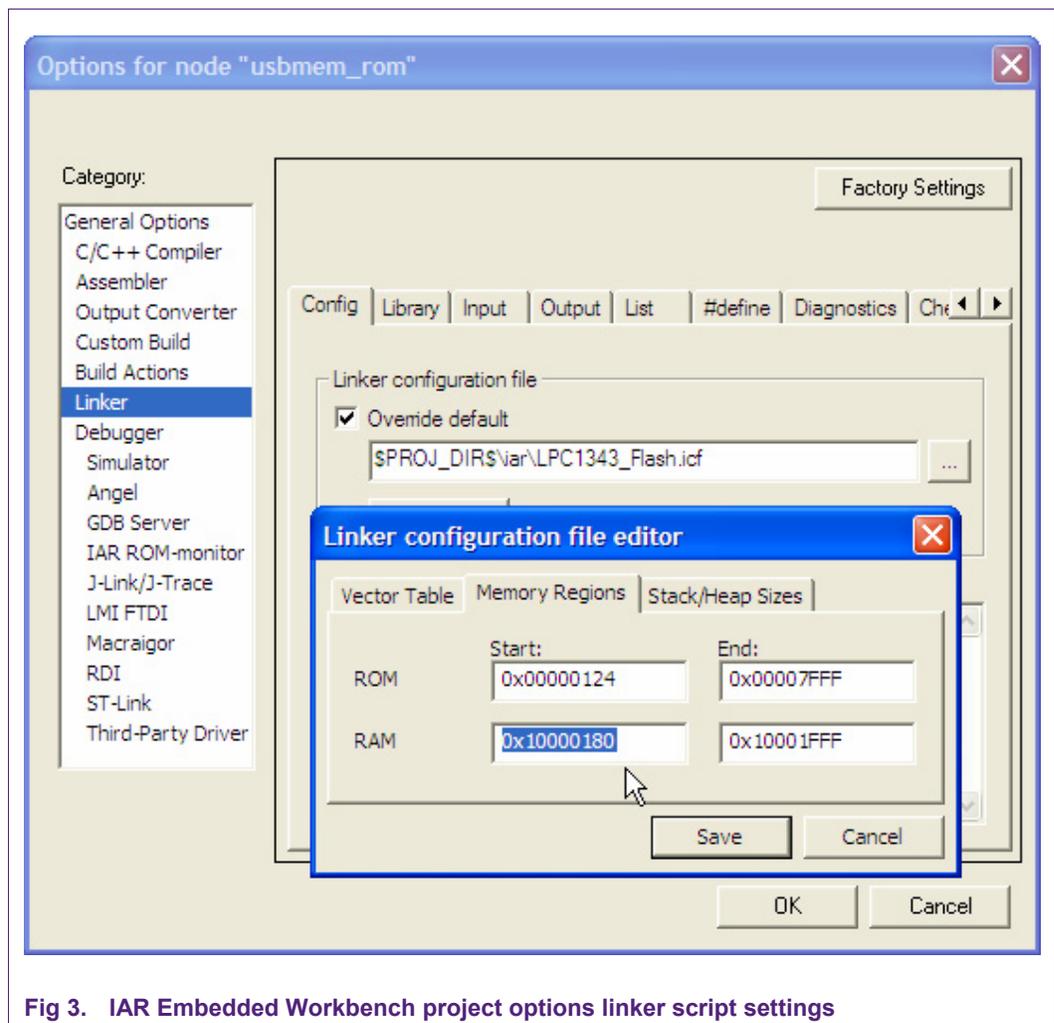


Fig 3. IAR Embedded Workbench project options linker script settings

3.1.3 Keil µVision4 RealView MDK-ARM

In Keil µVision4, use the Target tab in the Project Options dialog to change the RAM region. Set the start address to 0x10000180 and reduce the size by 0x180.

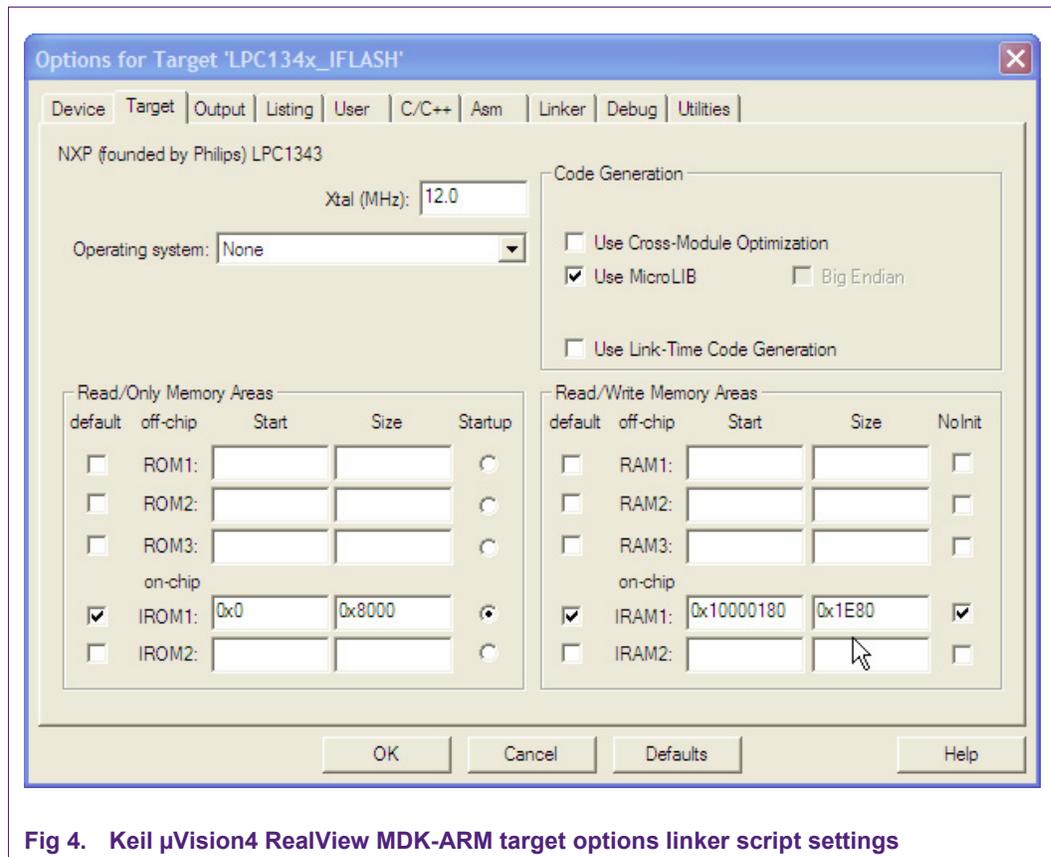



Fig 4. Keil μVision4 RealView MDK-ARM target options linker script settings

3.2 ROM initialization

The LPC1300 on-chip ROM always executes at reset. This is key for the chip to start up in a known state. It is important to make sure that the on-chip ROM is allowed to execute before user code when you are developing code with a debugger. This is typically ensured by use of a debugger macro or script file. Most LPC1300 development tools ship with compatible debugger macros that ensure the ROM runs at startup. If you have any questions about this, ask your development tool provider.

3.3 Calling on-chip USB driver functions

The USB driver has an API with three functions and an interrupt handler. They are called through a jump table located in ROM. The jump table location may change as the ROM is improved on newer products, so it is accessed through a pointer at a fixed address. To access these functions, it is necessary to declare the jump table entries and a pointer-to-pointer to the jump table. [Fig 5](#) shows the pointer setup.

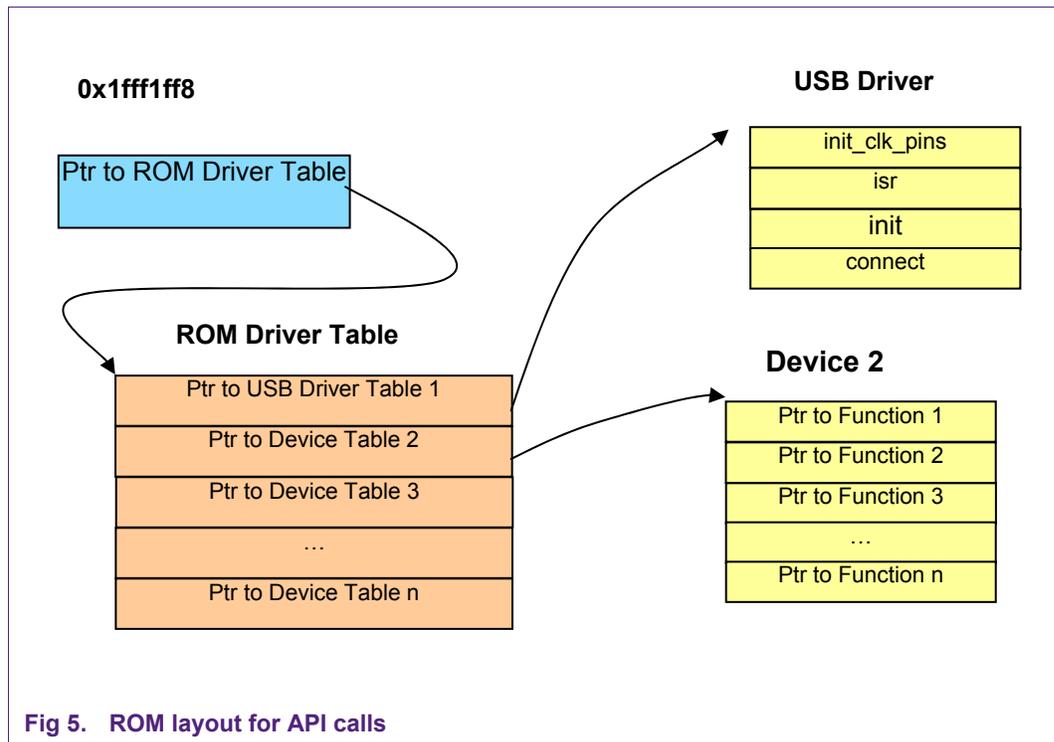

The following C code can be used:

```
typedef struct _USBD {
    void (*init_clk_pins)(void);
    void (*isr)(void);
    void (*init)( USB_DEV_INFO * DevInfoPtr );
    void (*connect)(uint32_t con);
} USBD;

typedef struct _ROM {
    const USBD * pUSBD;
} ROM;

ROM ** rom = (ROM **)0x1fff1ff8;
```

To call one of the functions, syntax like that below could be used. This code dereferences the jump table location for the USB device driver at 0x1fff1ff8, then uses the jump table to call into the USB driver `init_clk_pins()` function.

```
(*rom)->pUSBD->init_clk_pins();
```

3.4 Configuring the USB driver interrupt

The on-chip USB uses an interrupt to respond to events generated by the USB controller in the LPC1300. The USB interrupt is in the Cortex interrupt vector table which starts at 0x00000000. When this interrupt is received by the application code, it must be passed on to the interrupt handler in the USB driver in ROM.

On the LPC1300, user code is compiled to run out of Flash at 0x00000000. By default, upon reset, the on-chip ROM is mapped to 0x00000000 instead of Flash. When the microcontroller's ROM-based initialization code has completed, then the memory is remapped so that flash memory starts at 0x00000000 and the ROM containing the USB driver starts at 0x1FFF1000. At this point, when the memory at 0x00000000 is remapped, control of interrupts is transferred from ROM to user flash memory.

To ensure that the ROM USB interrupt handler is called, an interrupt must be declared in the user code that calls the ROM interrupt handler. When using the industry-standard CMSIS headers for Cortex, the interrupt handler should look like the code below, regardless of which development tool is used.

```
USB_IRQHandler(void)
{
    (*rom)->pUSBD->isr();
}
```

3.5 Configuring USB driver data structures

To use the on-chip USB driver in Mass Storage Class mode, a few structures must be set up. A `USB_DEV_INFO` must be declared. Its `DevType` member needs to be initialized to `USB_DEVICE_CLASS_STORAGE` and its `DevDetailPtr` member needs to point to an `MSC_DEVICE_INFO` structure. In the `MSC_DEVICE_INFO` structure, the `StrDescPtr` must be initialized to point to the USB String Descriptor for your device. Most importantly, functions to read and write blocks of data to local storage must be defined and `MSC_DEVICE_INFO` must be initialized to point to them. In this simple example, we will read and write data in on-chip RAM, but reads and writes to external SPI flash memory could also be implemented.

For more detail on all of these structure fields, see the User's Manual chapter titled USB on-chip driver.

3.5.1 USB_DEVICE_INFO initialization

To specify that we plan to initialize the driver for Mass Storage Class mode, we set `DevType`. `DevDetailPtr` points to a `MSC_DEVICE_INFO` structure with MSC-specific configuration fields.

```
DeviceInfo.DevType = USB_DEVICE_CLASS_STORAGE;
DeviceInfo.DevDetailPtr = (uint32_t)&MscDevInfo;
```

3.5.2 MSC_DEVICE_INFO initialization

The `MSC_DEV_INFO` structure contains information needed to configure the on-chip driver to implement a Mass Storage Class USB peripheral. Some key fields to initialize are the Vendor ID, Product ID, string descriptor, and block sizes and counts. A block size of 512 bytes is standard for disk drives. The block count should be set to the number of blocks in your device. `MSC_MemorySize` should be equal to `MSC_BlockSize * MSC_BlockCount`.

```
MscDevInfo.idVendor = USB_VENDOR_ID;
MscDevInfo.idProduct = USB_PROD_ID;
MscDevInfo.StrDescPtr = (uint32_t)&USB_StringDescriptor[0];
MscDevInfo.BlockSize = MSC_BlockSize;
MscDevInfo.BlockCount = MSC_BlockCount;
MscDevInfo.MemorySize = MSC_MemorySize;
```

Two functions are needed to read and write data to the storage device. They are passed byte offsets, a small RAM buffer, and a length value. The `MSC_Read` and `MSC_Write` function pointers in `HID_DEVICE_INFO` structure must be initialized to point to these functions so that the on-chip USB driver is able to call those functions and transfer the data when the PC requests reads and writes of the MSC device.

```
MscDevInfo.MSC_Read = MSC_MemoryRead;
MscDevInfo.MSC_Write = MSC_MemoryWrite;
```

3.5.3 USB string descriptor initialization

A String Descriptor is an array of 2-byte characters that provides human-readable text that can facilitate the device identification and install process. String Descriptors use 2-byte characters in Unicode format to allow representation of many languages worldwide. Review the USB specification for more details on the String Descriptor format.

```

/* USB String Descriptor (optional) */
const uint8_t USB_StringDescriptor[] = {
    /* Index 0x00: LANGID Codes */
    0x04,                                /* bLength */
    USB_STRING_DESCRIPTOR_TYPE,          /* bDescriptorType */
    WBLVAL(0x0409), /* US English */     /* wLANGID */
    /* Index 0x04: Manufacturer */
    0x1C,                                /* bLength */
    USB_STRING_DESCRIPTOR_TYPE,          /* bDescriptorType */
    'N',0,
    'X',0,
    'P',0,
    ' ',0,
    'S',0,
    'E',0,
    'M',0,
    'I',0,
    'C',0,
    'O',0,
    'N',0,
    'D',0,
    ' ',0,
    ...

```

3.6 Call setup functions

In addition to the setup above, this small section lists the actual calls that need to be completed to initialize the on-chip USB driver. For more detail, examine the example project.

1. Enable 32-bit Timer 1.
Timer32 1 is used by the ROM driver for internal timing and cannot be used by the application program.
2. Call `init_clk_pins()`;
3. Call `init()`;
4. Call `connect()`;

4. Using the usbmemrom example

This application note describes how to run the sample HID application using several combinations of hardware and software. Please note that three example software workspaces have been provided; NXP's LPCXpresso, IAR, and Keil tools. Although the C code is the same, each workspace has been customized to easily open in the specific IDE it is targeted for. The specific boards it was tested on are listed below, but since `usbmemrom` does not use any external peripheral functions such as LEDs, it should run on any board with an LPC1343 and a USB connection.

Table 2. Tool combinations

Software suite	JTAG probe	Target board
LPCXpresso by Code Red	LPC-LINK integrated on LPCXpresso board	LPCXpresso board and Embedded Artists LPCXpresso baseboard
LPCXpresso by Code Red	LPC-LINK integrated on LPCXpresso board	LPCXpresso board
IAR Embedded Workbench IDE 5.4	J-Link integrated on IAR LPC1343-SK board	IAR LPC1343-SK board
Keil μ Vision4 RealView MDK-ARM	ULINK2 by Keil	Keil MCB1000 board

4.1 Running usbmemrom on an LPCXpresso LPC1343 board using the LPCXpresso IDE

The LPCXpresso board contains an on-board LPC_LINK USB to JTAG/SWO debug adapter and an LPC1343, so no external JTAG debugger is required.

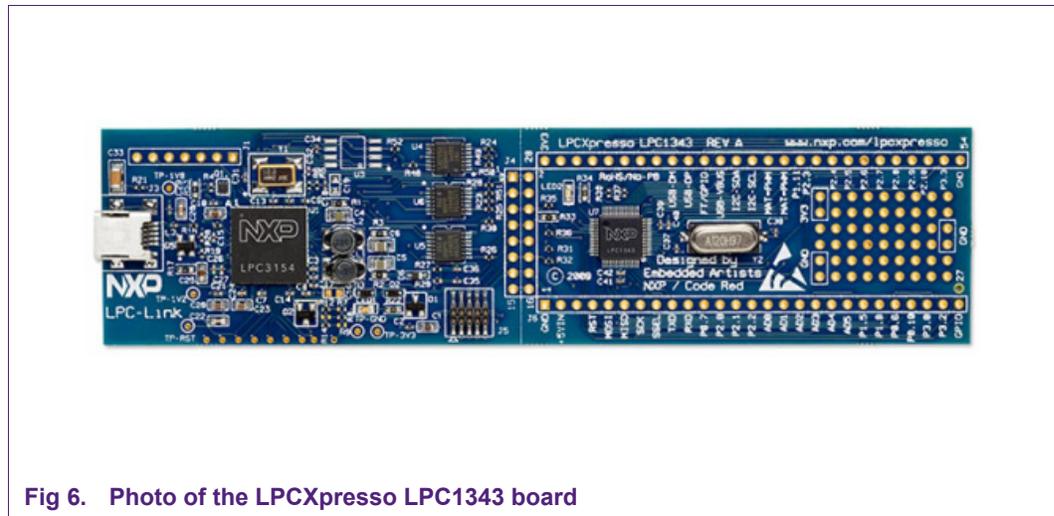


Fig 6. Photo of the LPCXpresso LPC1343 board

4.1.1 Using the LPCXpresso board with the Embedded Artists' base board

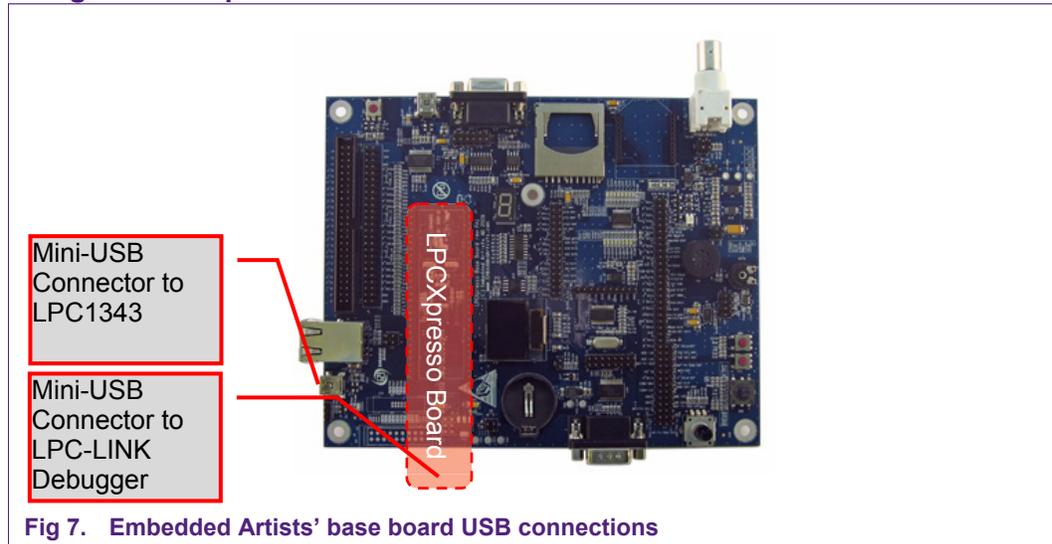



Fig 7. Embedded Artists' base board USB connections

Solder the 0.1" headers onto the LPCXpresso board, and then plug it into the EA baseboard. Now you can use a mini-USB cable to connect the base board to your PC. There are also jumpers that need to be set up to enable USB on the EA baseboard. At the time of this writing, J14 pins 1 and 2 need to be closed. J14 is near the baseboard's Ethernet jack. J12 and J14 also need to have pins 1 and 2 closed. Those jumpers are located near the potentiometer. There are many more jumper options on the EA base board; if you have trouble please review the complete Embedded Artists jumper documentation.

4.1.2 Modifying the LPCXpresso board

An alternative to using the Embedded Artists' LPCXpresso base board is to modify the LPCXpresso LPC1343 board and add a USB cable. Since the LPC1343 has a USB phy on-chip, only a pullup resistor is needed to connect the microcontroller to a USB port.

Note: This simple connection does not implement NXP Soft-Connect to allow soft disconnection and connection to the USB bus nor does it implement USB power. Because of this, the USB connection must be plugged into the PC after the USB peripheral is initialized. If the USB port is connected before the LPC USB peripheral is initialized, the pullup resistor will notify the PC that a USB device is present, yet the microcontroller's USB peripheral will not respond because it has not been initialized. This will trigger Windows to generate an error mentioning a malfunctioning USB device. Unplug and re-plug the device to dismiss the error.

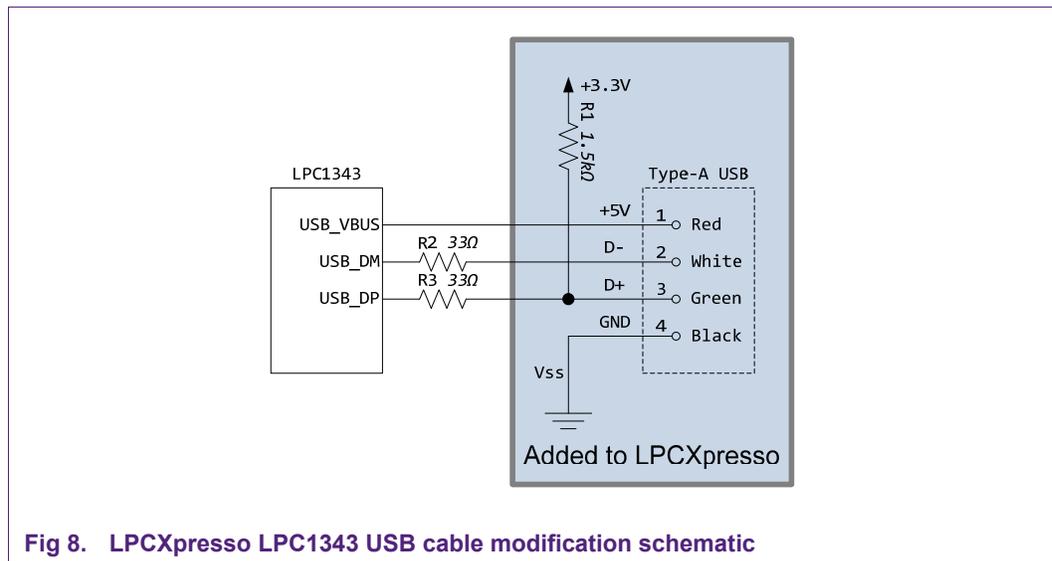

Note: Rather than building a cable or wiring a USB Type-A connector, you could take an existing A-B USB cable and cut the B connector off of it. Then the A side of the cable could be stripped and soldered onto the LPCXpresso board.

4.1.3 Starting usbmemrom in the LPCXpresso IDE

Unzip the example projects included with this application note. Start the LPCXpresso IDE and use the [Import Example Projects](#) link in the [Quickstart Panel](#) to select the `lpcxpresso_usbmemrom.zip`. Make sure to import both the `usbmemrom` project and the `CMSIS` project if it is not already in your workspace.

Connect the LPCXpresso board's LPC-LINK debugger to your development PC using a mini-USB cable.

If you are using the LPCXpresso USB modification, do not connect the LPC1300's USB port to a PC. Because the modification hard-wires a 1.5k pullup, the PC will think the device has malfunctioned if it is connected yet non-responsive. When using the mod, it is best to connect the USB cable only after the code has initialized the LPC1343 USB peripheral. This is not a problem if the NXP SoftConnect transistor is added to the board. The Embedded Artists' baseboard, as well as the Keil and IAR development boards, both include the SoftConnect transistor, so the USB can be connected physically and only enumerated by the PC once the USB peripheral is initialized.

Make sure that `usbmemrom` is selected as the current project in LPCXpresso, and then choose [Debug 'usbmemrom' \(Debug\)](#) in the LPCXpresso Quickstart Panel. LPCXpresso should build the project, download it to the target, and then run to the first line of `main()`. Run or step through the code until the call to `connect(TRUE)` has been executed, then plug the LPC1300 cable (the modification) into a PC. If sound is on, you should hear the PC enumerate the LPC1300 MSC device. At this point, you may skip to the section "Exercising `usbmemrom`."

4.2 Running usbmemrom on an IAR LPC1343-SK board using IAR Embedded Workbench

The LPC1343-SK from IAR contains an on-board JLINK USB to JTAG/SWO debug adapter and an LPC1343, so no external JTAG debugger is required.

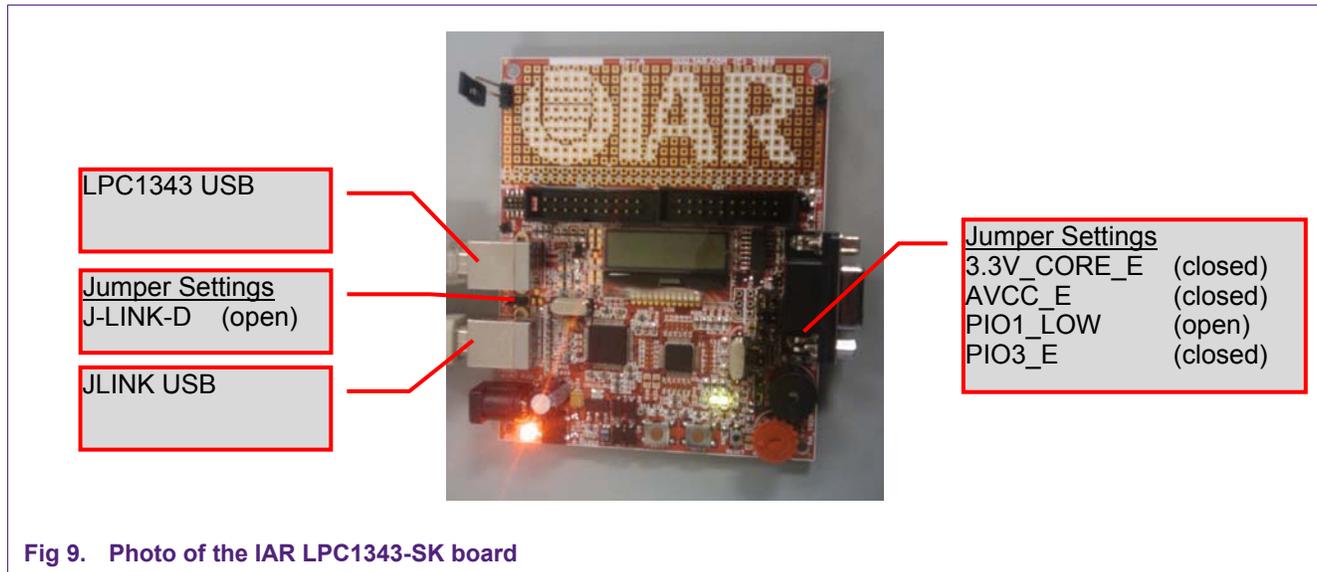


Fig 9. Photo of the IAR LPC1343-SK board

4.2.1 Setting up the IAR LPC1343-SK board

There are a few jumper settings that are important for the IAR LPC1343-SK board. First, jumper J_LINK_D, located between the two USB connectors, must be open to enable the on-board JLINK debugger. The 3.3V_CORE_E and AVCC_E jumpers must be connected. PIO1_LOW must be left open- if this jumper is connected, then the LPC1343 will go into In System Programming (ISP) mode upon reset instead of running the code in flash. PIO3_E must be closed. PIO3_E enables the connection of USB VBUS.

4.2.2 Starting usbmemrom in IAR Embedded Workbench IDE 5.4

The IAR LPC1343-SK board has two USB connectors. The one marked JLINK connects to the integrated JTAG debugger. The USB jack marked USB connects to the LPC1343 target. Connect them both to your PC using standard USB cables.

Now unzip the example projects included with this application note. Start IAR Embedded Workbench IDE 5.4. Using the Open Workspace option in the File menu, open the IAR version of the usbmemrom project. Choose make from the Project menu, then choose Download and Debug from the Project menu. Step through the code until the call to connect(TRUE) has been executed. If sound is on, you should hear the PC enumerate the LPC1300 MSC device. At this point, you may skip to the section "Exercising usbmemrom."

4.3 Running usbmemrom on a Keil MCB1000 board using the Keil μ Vision4 IDE

To debug using the MCB1000 board, you will need to connect the board to a JTAG/SWO debugger such as the Keil ULINK 2.

4.3.1 Setting up the MCB1000 board and ULINK 2 debugger

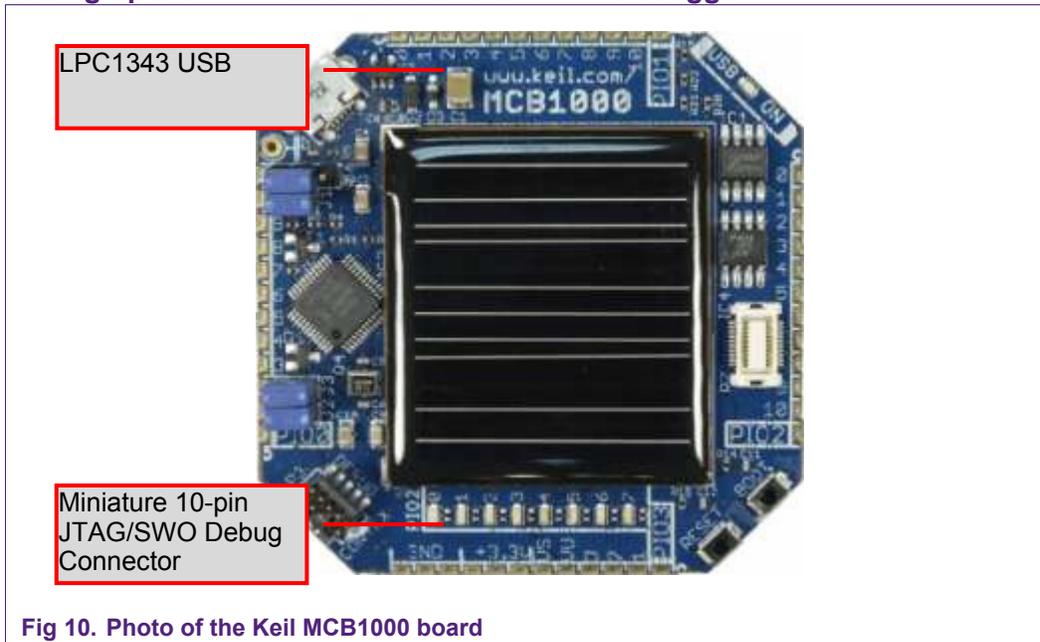


Fig 10. Photo of the Keil MCB1000 board

Connect the ULINK to your PC using a standard USB cable, and then connect the ULINK to the Keil MCB1000 target board using a mini 10-pin debug cable. At the time of writing this document, ULINK-2 interfaces are shipping only with a large 20-pin debug cable. The small 10-pin cable which fits the MCB1000 board may need to be ordered separately. To connect it to the ULINK-2, the plastic clamshell case can be disassembled by removing the screw on the bottom. Inside the ULINK-2 are five connectors for various types of debugging cables. Plug in the mini 10-pin cable and then connect it to the MCB1000 target board.



Fig 11. Photo of the Keil ULINK 2 JTAG/SWO debug interface, disassembled

Connect the MCB1000's USB port to your PC using a standard micro-USB cable.

4.3.2 Starting usbmemrom in the Keil µVision4 IDE

Now unzip the example projects included with this application note. Start the Keil µVision4 IDE and use the Open Project option in the Project menu to open the Keil usbmemrom project. Chose Build Target from the Project menu to compile the project,

then choose Download from the Flash menu to program the LPC1300 microcontroller, then choose Start/Stop Debug Session from the Debug menu to enter debug mode. Step through the code until the call to connect(TRUE) has been executed. If sound is on, you should hear the PC enumerate the LPC1300 MSC device. At this point, you may skip to the section “Exercising usbmemrom.”

4.4 Exercising usbmemrom

At this point the LPC1343 usbmemrom example should be running on your board, which is connect to the PC. In the Windows Explorer there should be a disk drive labeled “LPC134x USB.” On this drive will be a file called readme.txt.

If the PC is running Windows, and it displays a message regarding a “Malfunctioning USB Device,” there are a few troubleshooting tips that should solve the problem. First, open the Device Manager, which can be found in the Control Panel System dialog, under the Hardware tab in Windows XP. In other versions of Windows, or other operating systems, you may have to search for this functionality. Make sure the device was detected in the “Disk drives” section. If it is detected in the “Human Interface Devices” section of the Device Manager, this is probably because other example projects have been run on this PC and the HID driver has been installed on this port for this USB Vendor and Device ID. Right click on the device and choose “Uninstall,” then unplug it from the PC and reconnect it. Windows should automatically re-install the correct MSC USB device driver.

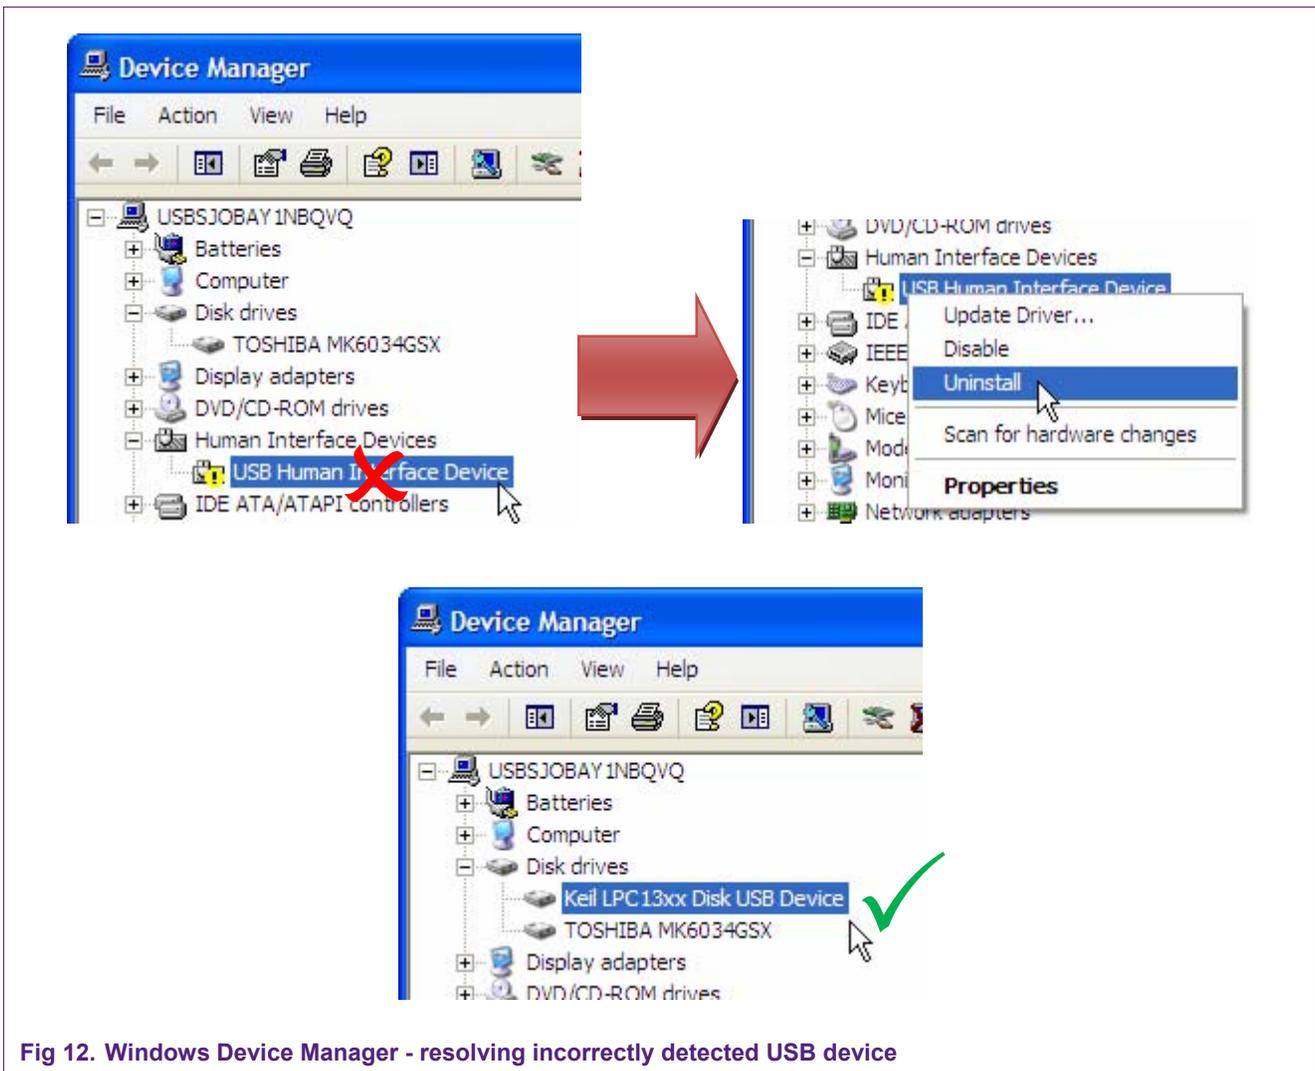


Fig 12. Windows Device Manager - resolving incorrectly detected USB device

5. Conclusion

In conclusion, the on-chip USB driver in the LPC1300 family of microcontrollers can help simplify the process of building a simple MSC device. Although the built-in driver is very simple, it is helpful to be able to build an MSC device very quickly with minimal flash memory usage.

6. USB Overview


6.1 What is USB?

USB stands for Universal Serial Bus. It is a standard for an interface designed to connect peripherals to PCs. The standard is managed by the USB Implementers Forum, Inc. which can be contacted at USB.org. Some key design drivers of USB are low cost, hot-pluggability, interoperability, and ease-of-use. The USB standard defines cabling characteristics, standardized connectors, and electrical specifications for bus power, hardware signaling standards, a communications protocol, and application profiles.

USB has become ubiquitous. In 2008 it had achieved an installed base of over 8 billion ports, and sales were at 2 billion ports a year.

6.2 USB bus topology

On the USB bus, there is a single USB host which is usually a PC, one or more USB devices, and optionally one or more USB hubs. Each USB connection is point-to-point, and all communications are initiated by the USB host. On the upstream end of a USB connection, there will either be a USB host, or a USB hub's downstream port. On the downstream end of a USB connection, there will be either a USB device, or a USB hub's upstream port. In total, a USB bus can support up to 127 devices. This makes up a network that looks like a tree and is designated a "star-tier" topology.

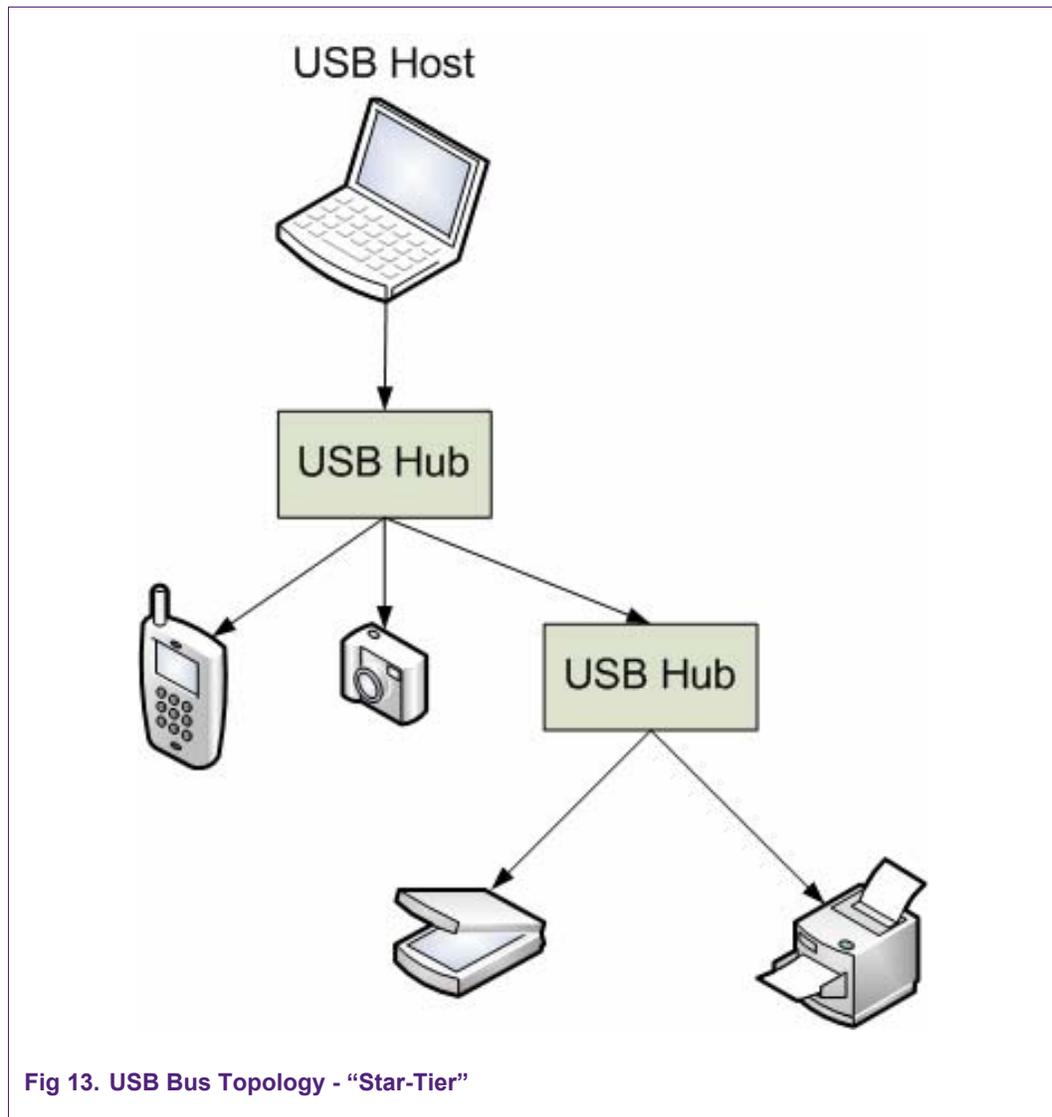

6.3 USB bus terminology

The USB Interface has its own terminology. Understanding the terminology can make USB products easier to design.

6.3.1 Device class

A USB Device Class is a predefined profile that can simplify product development. If you are able to use a standard device class in your product, you may be able to reduce or eliminate PC driver and application development and facilitate compatibility with various platforms such as Linux or future releases of Windows. Common device classes include HID (used for keyboards and mice) as well as MSC (used for USB disk drives and memory sticks).

6.3.2 Endpoint

A USB Endpoint is a buffer. It is assigned a number between zero and fifteen inclusive and a direction. An IN Endpoint is one that results in data transfer into the USB Host. An OUT Endpoint results in data transfer out of the Host. USB Endpoint IN and OUT

designations are referring to host transfers. An IN endpoint on a USB device actually results in data being sent to the host, not being received by the device.

Two linked endpoints of the same number and direction are called a pipe and make up a unidirectional communications channel. For example, EP 5 IN on the USB device combined with EP 5 IN on the USB host make up a pipe that transfers data from the device to the host.

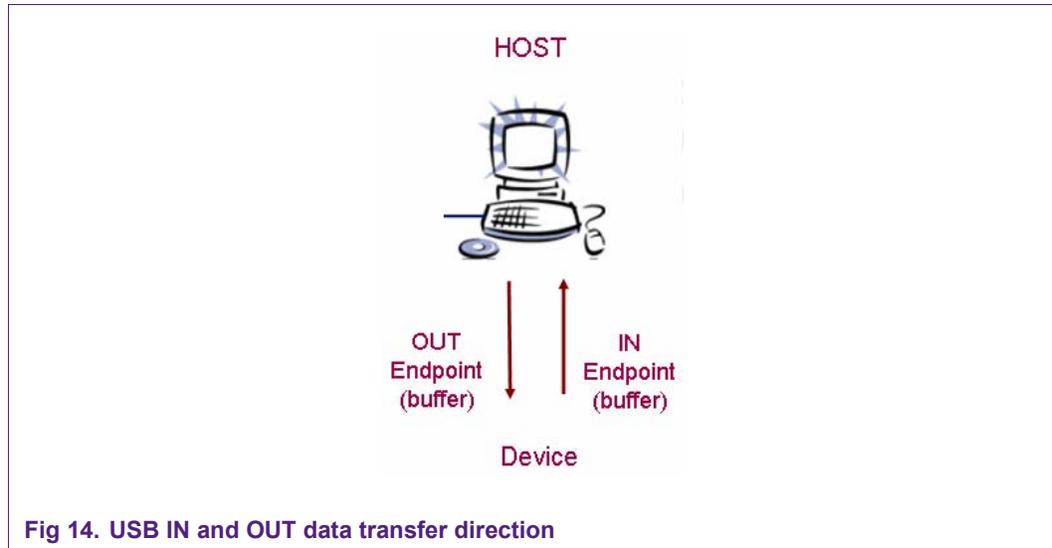


Fig 14. USB IN and OUT data transfer direction

6.3.3 Descriptor

A USB Descriptor is a static data structure that defines the capabilities of a USB device. It is read from the device by the host when the device is first connected to the USB bus. It describes the device's manufacturer, product type, product name, number and type of end points, and the device class.

6.3.4 Enumeration

Enumeration is the process of discovering USB devices on the bus and reading their descriptors. Afterwards, the host initiates a process to install and instantiate the correct USB driver.

6.3.5 Vendor ID (VID) and Product ID (PID)

The Vendor ID (VID) and Product ID (PID) are both 16-bit integers. Each USB product design must be identified by a unique combination of VID and PID to pass USB certification. The VIDs are assigned by the USB Implementer's Forum (USB-IF) and cost \$2000 as of December 2, 2009.

7. Legal information

7.1 Definitions

Draft — The document is a draft version only. The content is still under internal review and subject to formal approval, which may result in modifications or additions. NXP Semiconductors does not give any representations or warranties as to the accuracy or completeness of information included herein and shall have no liability for the consequences of use of such information.

7.2 Disclaimers

General — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information.

Right to make changes — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in medical, military, aircraft, space or life support equipment, nor in applications where failure or malfunction of a NXP Semiconductors product can reasonably be expected

to result in personal injury, death or severe property or environmental damage. NXP Semiconductors accepts no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is for the customer's own risk.

Applications — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

Export control — This document as well as the item(s) described herein may be subject to export control regulations. Export might require a prior authorization from national authorities.

7.3 Trademarks

Notice: All referenced brands, product names, service names and trademarks are property of their respective owners.

8. Contents

1.	Introduction	3	7.2	Disclaimers	23
2.	On-chip USB driver features	3	7.3	Trademarks	23
3.	On-chip USB driver setup.....	4	8.	Contents	24
3.1	RAM allocation	4			
3.1.1	LPCXpresso by Code Red	5			
3.1.2	IAR Embedded Workbench IDE 5.4	7			
3.1.3	Keil µVision4 RealView MDK-ARM	8			
3.2	ROM initialization	9			
3.3	Calling on-chip USB driver functions	9			
3.4	Configuring the USB driver interrupt	10			
3.5	Configuring USB driver data structures	11			
3.5.1	USB_DEVICE_INFO initialization	11			
3.5.2	MSC_DEVICE_INFO initialization	11			
3.5.3	USB string descriptor initialization	12			
3.6	Call setup functions	12			
4.	Using the usbmemrom example	12			
4.1	Running usbmemrom on an LPCXpresso LPC1343 board using the LPCXpresso IDE.....	13			
4.1.1	Using the LPCXpresso board with the Embedded Artists' base board	14			
4.1.2	Modifying the LPCXpresso board.....	14			
4.1.3	Starting usbmemrom in the LPCXpresso IDE ..	15			
4.2	Running usbmemrom on an IAR LPC1343-SK board using IAR Embedded Workbench	15			
4.2.1	Setting up the IAR LPC1343-SK board	16			
4.2.2	Starting usbmemrom in IAR Embedded Workbench IDE 5.4	16			
4.3	Running usbmemrom on a Keil MCB1000 board using the Keil µVision4 IDE	16			
4.3.1	Setting up the MCB1000 board and ULINK 2 debugger	17			
4.3.2	Starting usbmemrom in the Keil µVision4 IDE ..	17			
4.4	Exercising usbmemrom.....	18			
5.	Conclusion.....	20			
6.	USB Overview.....	20			
6.1	What is USB?.....	20			
6.2	USB bus topology	20			
6.3	USB bus terminology	21			
6.3.1	Device class	21			
6.3.2	Endpoint	21			
6.3.3	Descriptor.....	22			
6.3.4	Enumeration	22			
6.3.5	Vendor ID (VID) and Product ID (PID)	22			
7.	Legal information	23			
7.1	Definitions	23			

Please be aware that important notices concerning this document and the product(s) described herein, have been included in the section 'Legal information'.



© NXP B.V. 2010. All rights reserved.

For more information, please visit: <http://www.nxp.com>
For sales office addresses, email to: salesaddresses@nxp.com

Date of release: 18 January 2010
Document identifier: AN10905_1